

Stow & Glo Assist Handle

INSTALLATION INSTRUCTIONS

Part#: 86475-30-BL-04-001

PARTS/TOOLS NEEDED:

			
Stow & Glo Handle	1/4" Pan Head Screws (Not Provided, recommended 4 per end cap & coated for exterior application)	Power Drill w/ 1/8" Drill Bit (if screws are used for install)	Silicone Sealant (optional - not supplied)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.



1. Determine the installation location for your handle*, making sure there is a solid support or backer material behind the location to support the handle. If there is no backer than you may need to use a bolt, larger washer, nut and plate (not provided).



*Use a level to ensure end caps are vertically aligned




2. Note that the handle measures 27.25" from the top of one cap to the bottom of the other. It is recommended that a 1/8" drill bit be used when using 1/4" screws, to drill the pilot holes. Install screws in top end cap first, beginning with the bottom right screw. Proceed with the bottom right screw on the bottom end cap. It is recommended that the handle be in the closed position when installing the top hinge and the open position when installing the bottom hinge.

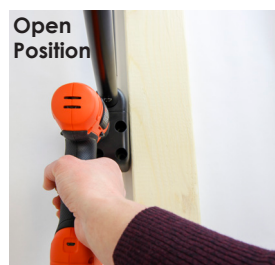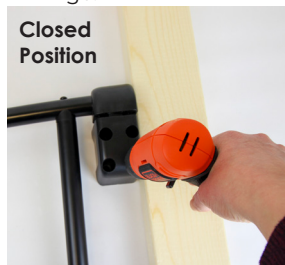

3. To create a seal around the screw holes, ITC recommends using a silicone sealant in pre-drilled holes before installing screws.



3. To operate the handle, swing the handle to the right 90°. To replace to the stowed position, gently pull up on the handle and rotate the handle to the left until secure.

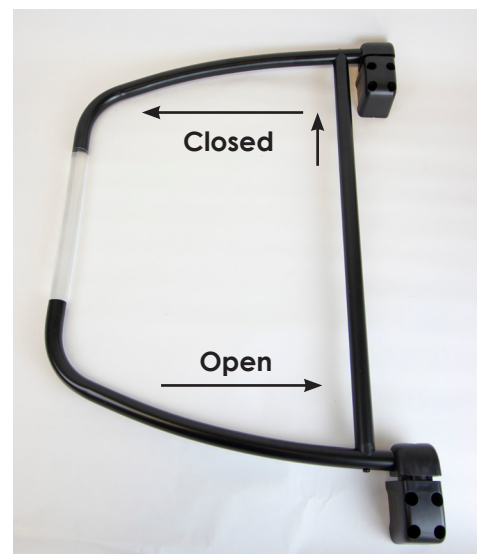

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Doc#710-00160 · Rev 1:01 · 11/22/22