

Transom Mount Ski Tow

Part#: 84600

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:



Ski Tow




Power Drill

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive(+) input.

Bracket Mount:

1. Drill two 3/8" holes 2.12" on center
2. Remove hex nuts and mounting plate from posts
3. Insert posts into holes drilled in step 1 making sure ski tow tongue is facing up
4. Install back plate over posts
5. Attach and tighten hex nuts back on posts

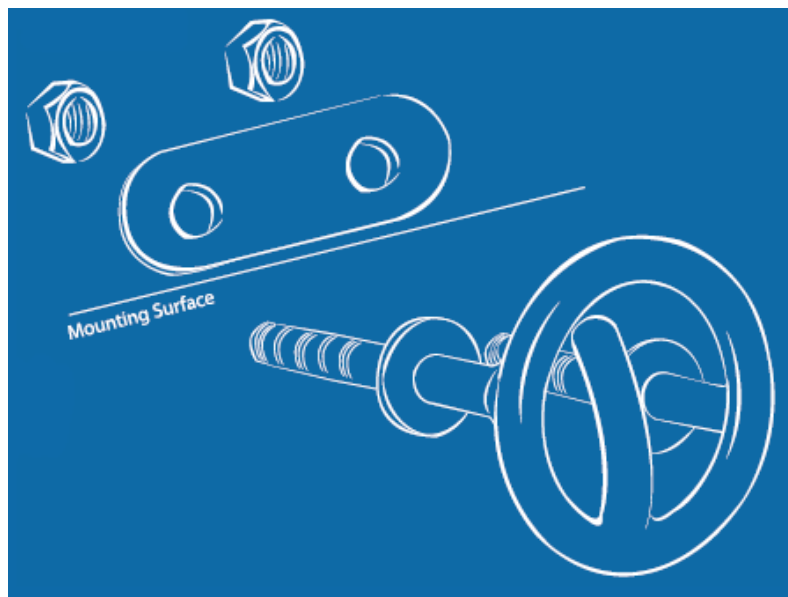

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
Rev A · 07/20/16